

(2) AMD 486 CPU.

CPU Type	DX/DX2 & DX4-133	DX4-100 DX4-120	DX4-100 V8B DX4-120 V8B	X5-133 X5-160
JP1	Open	Open	Open	Open
JP2	3-4	3-4	1-2,3-4	1-2,3-4
JP3	Open	Open	2-3	2-3
JP4	2-3	2-3	1-2	1-2
JP5	2-3	2-3	1-2	1-2
JP6	1-2	1-2	1-2	1-2
JP7	2-3	2-3	2-3	2-3
JP8	3-4	3-4	3-4	3-4
JP9	1-2,3-4	1-2,3-4	1-2,3-4	1-2,3-4
JP10	3-4	3-4	1-2,3-4	1-2,3-4
JP11	4-5	4-5	4-5	4-5
JP12	Open	Open	Open	Open
JP13	2-3	Open	1-2	1-2
JP14	Open	Open	1-2	1-2
JP15	Open	Open	Open	2-3
JP16	1-2	1-2	1-2	1-2

Note: AMD 486DX4-133 and X5-133 select to 33.3 MHz System Frequency
X5-160 select to 40 MHz System Frequency.

(3) Cyrix CPU.

CPU Type	DX/DX2/D4 (5V)	DX/DX2/D4 (3.45V)	5x86-100 5x86-120	5x86-133
JP1	2-3	2-3	Open	Open
JP2	2-3	2-3,4-5	1-2,3-4	1-2,3-4
JP3	Open	Open	2-3	2-3
JP4	2-3	2-3	2-3	2-3
JP5	1-2	1-2	1-2	1-2
JP6	2-3	2-3	1-2	1-2
JP7	1-2	1-2	2-3	2-3
JP8	3-4	3-4	3-4	3-4
JP9	1-2,3-4	1-2,3-4	1-2,3-4	1-2,3-4
JP10	2-3	2-3	1-2,3-4	1-2,3-4
JP11	2-3	2-3	4-5	4-5
JP12	Open	Open	Open	Open
JP13	Open	Open	Open	Open
JP14	Open	Open	1-2	1-2
JP15	Open	Open	Open	2-3
JP16	1-2	1-2	1-2	1-2

Note: 5x86-100= 33.3 MHz Frequency, 5x86-120 = 40 MHz Frequency,
5x86-133 = 33.3 MHz Frequency,