

## **Addendum for the 6IBM**

Please refer to JP3 on page 9 of this manual.

The factory default setting for JP3 (Power up FSB clock and AGP bus clock) is 100MHz.

CPUs that run on 66MHz may not boot at this frequency, so check JP3 before booting for the first time.

Also, if the user changes the CPU, care should be taken to set JP3 in accordance with the FSB Frequency of the new CPU.