

## Addendum

### 7IZM VGA Driver Installation notes

#### ➤ **ATI Graphics Driver for Windows NT 4.0**

- 1 Run the *Display* program located in the Control Panel, under *Settings* in the *Start* menu. Alternatively, position the cursor on the background of the desktop, click the right mouse button, then select *Properties* from the popup menu.
- 2 Select the *Settings* page.
- 3 Select *Display Type...*
- 4 Select *Change...* from the display options.
- 5 Select *Have Disk...*
- 6 NT 4.0 will prompt you for the correct path. Enter **D:\driv-all\ati-pro\winnt** where D: is the drive containing the ATI Driver Disk.
- 7 A list of [ATI] graphics accelerators will be displayed. Select the [ATI RAGE PRO TURBO AGP 2x], then click the *OK* button.
- 8 Windows NT 4.0 will once again prompt for confirmation. All appropriate files are then copied to the hard disk.
- 9 Restart Windows NT 4.0. Windows NT 4.0 will start up using the ATI drivers.
- 10 NT 4.0 will boot into a default mode and start the Display applet allowing for mode selection.

*Note:* If you select a color depth or resolution not supported by your card, NT 4.0 will substitute 640x480 in 256 colors for the display.

#### ➤ **Uninstalling the Windows NT 4.0 drivers**

##### ◆ **How to uninstall the ATI Windows NT 4.0 Device Driver.**

There are TWO ways to do this without re-installing Windows NT 4.0.

##### ● **first method:**

1. **Use Dos mode to go to the following directory:**

\winnt\system32\drivers

##### 2. **And Rename the following file:**

```
ren ATI.sys ATI.ati
```

Windows NT 4.0 looks for ATI.SYS drivers at boot time, so if it cannot find it, it cannot use it.

##### ● **second method:**

While running Windows NT 4.0, execute the *Win NT Setup* program. Select a NON-ATI driver (try VGA-compatible).