

Please note the following changes made to the user's manual that is included with your mainboard. Corrected the errors on page 25 (section 3-8 ) as shown below.

### 3-8 Frequency/Voltage Control

By choosing the Frequency/Voltage Control option from the CMOS Setup Utility menu (Figure 3-1), the screen below is displayed. This sample screen contains the manufacturer's default values for the mainboard.

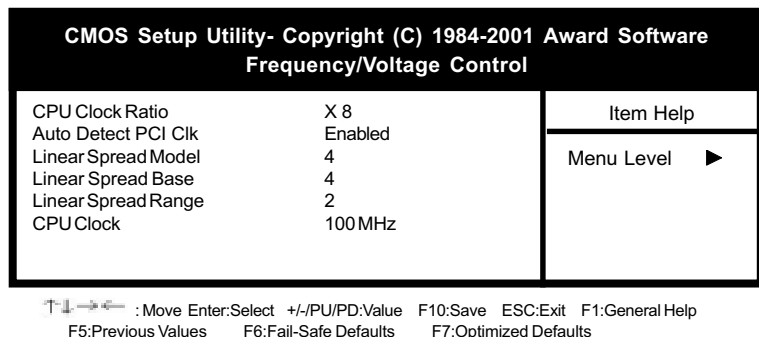


Figure 3-9 Frequency/Voltage Control Screen

#### A. CPU Clock Ratio

This feature allows user to manually configure your CPU clock ratio according to your processor's specifications.

#### B. CPU Clock

This feature allows the system memory to run at CPU clock speed. The default setting is at 100MHz.

Please note the following changes made to the user's manual that is included with your mainboard. Corrected the errors on page 25 (section 3-8 ) as shown below.

### 3-8 Frequency/Voltage Control

By choosing the Frequency/Voltage Control option from the CMOS Setup Utility menu (Figure 3-1), the screen below is displayed. This sample screen contains the manufacturer's default values for the mainboard.

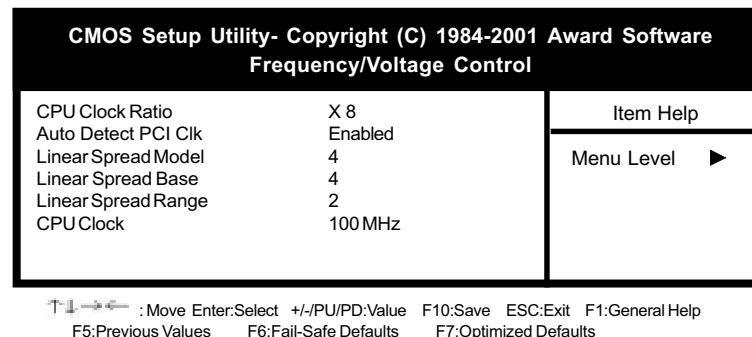


Figure 3-9 Frequency/Voltage Control Screen

#### A. CPU Clock Ratio

This feature allows user to manually configure your CPU clock ratio according to your processor's specifications.

#### B. CPU Clock

This feature allows the system memory to run at CPU clock speed. The default setting is at 100MHz.