


# Jumper Settings Quick Reference

## Front Panel Connector (J12)

<b>HDD LED</b>	VCC	1	2	Pwr LED+	<b>Pwr/Sip LEDs</b>
	LED	3	4	Slp LED+	
<b>Reset Switch</b>	Ground	5	6	Switch	<b>Power Switch</b>
	Switch	7	8	Ground	
<b>Infrared</b>	IR +5V	9	10	SN_NMI	
	IR RX	11	12	Ground	
	Ground	13	14	no connect	
	IR TX	15	16	no connect	
	CHIN2	17	18	no connect	

\*Power LED: for 3-pin (bi-color/single-color) mini-map) use **J13\***

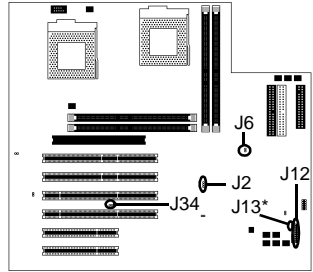

## CMOS Reset (J2)

<b>J2</b>	1-2	2-3
	Normal	Clear

If you have been locked out of your system because you forgot your password or set the CMOS incorrectly, or have just finished flashing your BIOS, follow the instructions below.

1. Power off the system, and disconnect the power supply
2. Close pins 2-3 on J2 (see mini-map for location of J2)
3. Wait about three seconds
4. Move jumper back to 1-2, then power on the system again

By following this procedure, you will erase your password and reset the CMOS.

## BIOS Boot Block (J6)

<b>J6</b>	open	close
	locked	unlocked

This jumper allows for the BIOS Boot Block to either be written to or write-protected.

### NOTE:

If the jumper J6 is unlocked and failure occurs during a BIOS flash, you run the risk of rendering your entire system unbootable. The backup protection of the Boot Block will be lost. Tyan will not be held responsible in such related events.

## PCI Speed Jumper (J34)

<b>J34</b>	open	close
	66 MHz	33 MHz

This jumper allows for the PCI speed to be set to either 66 MHz or 33 MHz.

### NOTE:

Tyan takes no responsibility and will not be held liable for damage related to the alteration of J34 from the correct setting corresponding to your PCI card manufacturer's designated operating speed.

\* indicates an optional feature