

Figure 2-3 : Map of Motherboard Jumpers (Addendum)



Attention: The CPU cooling fan must be connected to FAN3 ONLY. The CPU fan must be attached to this header in order to prevent risk of overheating the CPU. Chassis fans may be connected to either FAN1 or FAN2.

