MEMORY INSTALLATION GUIDE:	#1005020C
Toshiba T1900, T1910, T1950, T1960, T4500, T4600, T4700, T4800, T4850	
DescriptionViking P/N4Mb Memory Credit CardT2012U, RT2012U8Mb Memory Credit CardT2013U, RT2013U16Mb Memory Credit CardT2014U, RT2014U32Mb Memory Credit CardT2015U, RT2015UNote:Note:	ТОЅНІВА
Not every system will accept all the memory options listed. upgrades and configuration paths available.	Please refer to your Toshiba Reference Manual for your specific
<b>INSTALLATION INSTRUCTIONS:</b> Prepare the Computer	
Before you install a memory credit card, the computer must be configured for boot mode. To make sure the computer is set up properly, use the Pop-up Window, MaxTime or Setup.	Caution: Electro Static Discharge (ESD) can damage electronic components. Before touching the memory module, ensure that you are discharged of static electricity by touching a grounded metal object.
<b>OPEN THE COVER:</b>	
To open the memory slot cover and locate the memory slot, follow these steps: 1. Turn off the computer.	3. Locate the memory slot cover on the right side of the computer. (The Toshiba T4600, T4700, T4800, T4850 have the memory slot cover on the left side of the computer.)
2. Disconnect the AC adapter and open the display.	4. Place your finger on top of the cover and pull it open.
MEMORY SLOT COVER	
INSTALL THE CARD	
To install the memory card in the slot, follow these steps:    Image: Note: Image: To avoid damaging the memory card, be careful not to touch its edge connector (the edge you install into	2. Carefully slide the memory card into the slot and push firmly but gently to ensure a firm connection. As you insert the card, guides in the computer lead it into the socket. Do not force the card into position.
the computer.	3. Close the cover.
1. Insert the memory card, label side up into the memory card slot as illustrated below.	4. Connect the AC adapter and turn the power on.
MEMORY CARD	The installation is now complete.