

<b>Quick Reference (German)</b>	<b>G-1</b>
<b>Quick Reference (French)</b>	<b>F-1</b>
<b>Quick Reference (Spanish)</b>	<b>S-1</b>
<b>Quick Reference (Japanese)</b>	<b>J-1</b>
<b>Quick Reference (Chinese)</b>	<b>C-1</b>
<b>Quick Reference (Simplified Chinese)</b>	<b>SC-1</b>

## **Chapter 1 Overview**

Package Checklist .....	1-2
The AM35 Mainboard .....	1-3
Main Features .....	1-4
FIC Unique Innovation for Users (NOVUS) - Enhanced Mainboard Features and System Support .....	1-6

## **Chapter 2 Installation Procedures**

Quick Reference (from Page 2-2 to 2-4) .....	2-2
Mainboard Layout .....	2-2
1). Clear CMOS, Clear Password, FSB Speed Select .....	2-3
2). Front Panel Block Cable Connection .....	2-3
3). CPU Fan Installation .....	2-4
1). Set System Jumpers .....	2-4
Clear CMOS: CLR .....	2-4
Clear Password: CLP .....	2-5
FSB Frequency Select: FSB .....	2-6
2). Install Memory Modules .....	2-6
3). Install the CPU .....	2-8
4). Install Expansion Cards .....	2-8
5). Connect Devices .....	2-10
Floppy Diskette Drive Connector .....	2-10
IDE Device Connectors .....	2-10
ATX Power Connectors .....	2-11
Fan Connectors .....	2-11
Wake-On-Ring Connector .....	2-12

Wake-On-Lan Connector .....	2-12
CD Audio-In Connectors .....	2-13
Front Panel Block, Power LED and Speaker Connector ....	2-13
PS/2 Keyboard and Mouse Connector .....	2-15
Game/MIDI Connector .....	2-15
Universal Serial Bus Connectors .....	2-16
Serial Port Connectors .....	2-16
Printer Connector .....	2-17
Audio I/O Jacks .....	2-17

### **Chapter 3 BIOS Setup**

CMOS Setup Utility .....	3-1
Standard CMOS Setup .....	3-2
Advanced BIOS Features .....	3-4
Advanced Chipset Features .....	3-7
Integrated Peripherals .....	3-11
Power Management Setup .....	3-16
PnP/PCI Configurations .....	3-20
PC Health Status .....	3-21
Frequency/Voltage Control .....	3-22
Load Fail-Safe Defaults .....	3-23
Load Optimized Defaults .....	3-23
Supervisor/User Password .....	3-23
Save and Exit Setup .....	3-24
Exit without Saving .....	3-24