

Quick Reference


KBI-6130 / KBI-6130-V

Jumper Settings


DOC No. : 16409	Date : 1, 1999
Rev. : A0	Part No. : 25-10891-00

① **SW1-1/2/3/4 (System Frequency Select)**


Ratio	CPU Speed		SW1-1	SW1-2	SW1-3	SW1-4
	100MHz	66MHz				
3.5 x	350MHz	233MHz	ON	ON	OFF	OFF
4.0 x	400MHz	266MHz	ON	OFF	ON	ON
4.5 x	450MHz	300MHz	ON	OFF	ON	OFF
5.0 x	500MHz	333MHz	ON	OFF	OFF	ON
5.5 x	550MHz	366MHz	ON	OFF	OFF	OFF
6.0 x	600MHz	400MHz	OFF	ON	ON	ON
6.5 x	650MHz	433MHz	OFF	ON	ON	OFF
7.0 x	700MHz	466MHz	OFF	OFF	ON	ON
7.5 x	750MHz	500MHz	OFF	OFF	ON	OFF

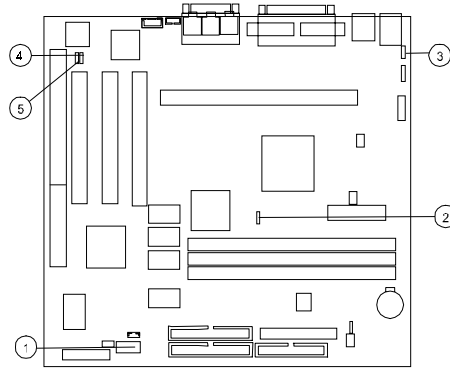


SW1-5 (Clear CMOS)

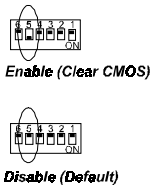


SW1-6 (Clear Password)

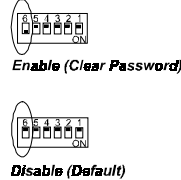


② **VGA_DIS (Onboard Video Feature)**

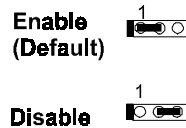

④ **AUD_DIS (Onboard Audio Feature)**

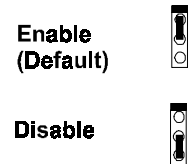

③ **KEY_WAKE (Keyboard Wake-Up)**

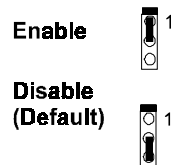

⑤ **EP (Flash ROM Type Select)**



Connectors

