


CPU Speed Select: JCK1, JCK2, J6

The table below shows the jumper settings for the CPU based on its internal clock speed.

CPU Speed	External Clock	CPU Clock Rate		Bus Clock Rate
		JCK1	JCK2	
166 MHz	66 MHz	J6	JCK1	J6
150 MHz	60 MHz	J6	JCK2	J6
133 MHz	66 MHz	J6	JCK1	J6
120 MHz	60 MHz	J6	JCK2	J6
100 MHz	66 MHz	J6	JCK1	J6
90 MHz	60 MHz	J6	JCK2	J6
75 MHz	50 MHz	J6	JCK1	J6


Bus / CPU Clock Ratio: JC1, JC2

Bus/CPU Clock Ratio	JC1	JC2
1/2	JC1	JC2
1/3	JC1	JC2
2/3	JC1	JC2
2/5	JC1	JC2

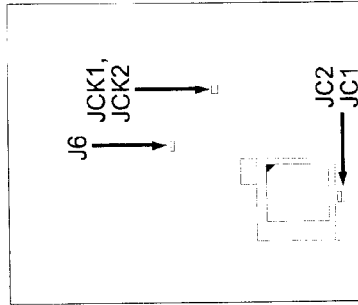

CPU Voltage Mode Select: JVR

CPU Voltage Mode	JVR
STD / VR (Default)	JVR
VRE	JVR

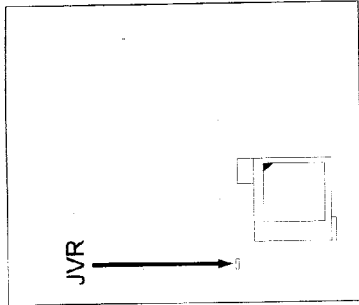

Cache Size Select: JS1

Cache Size	JS1
256KB (Default)	JS1
512KB	JS1

