


## Check the Jumper Settings


Check the mainboard jumpers to ensure that the board is configured correctly.

### *How to Set Jumpers*


A jumper consists of two or more pins mounted on the mainboard. Some jumpers might be arranged in a series with each pair of pins numbered differently. Jumpers are used to change the electronic circuits on the mainboard. When a jumper cap (or shunt) is placed on two jumper pins, the pins are **SHORT**. If the jumper cap is removed (or placed on just a single pin), the pins are **OPEN**.

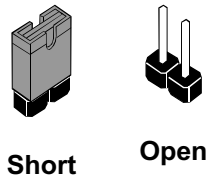

This illustration shows a 2-pin jumper. When the jumper cap is placed on both pins, the jumper is **SHORT**. If you remove the jumper cap, or place the jumper cap on just one pin, the jumper is **OPEN**.




This illustration shows a 3-pin jumper. The jumper cap is placed on pins 2 and 3, so this jumper setting is **SHORT PINS 2-3**.



This illustration shows the same 3-pin jumper. The jumper cap is placed on pins 1 and 2, so this jumper setting is **SHORT PINS 1-2**.

In this manual, all the jumper illustrations clearly show the pin numbers. When you are setting the jumpers, make sure that the jumper caps are placed on the correct pins to select the function or feature that you want to enable or disable.

## Jumper Layout

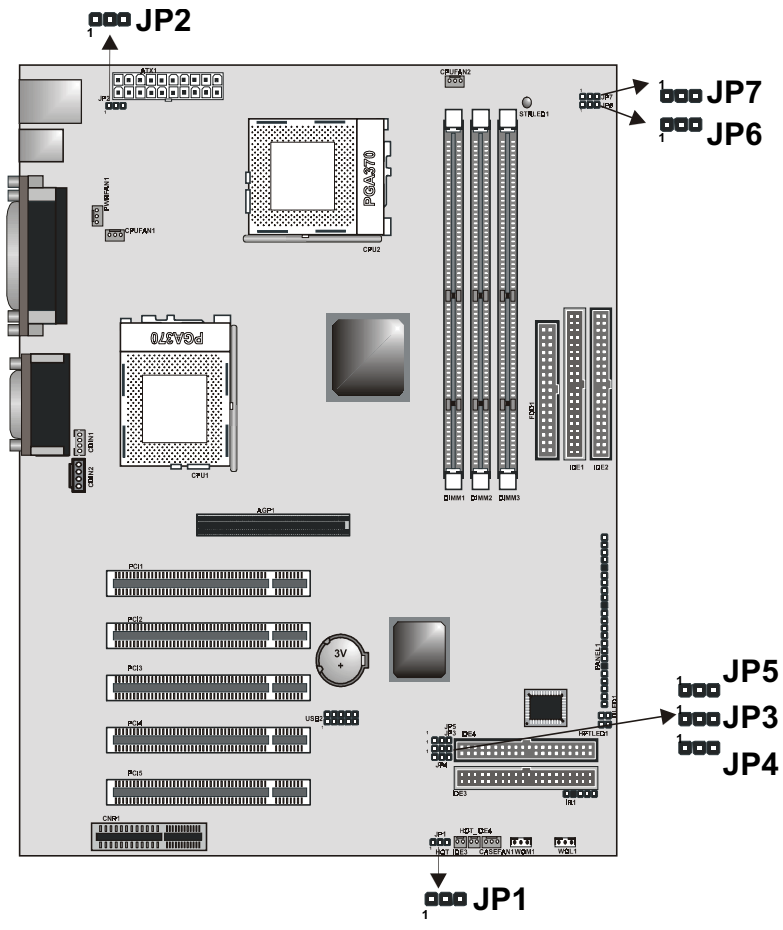


### ***JP1: Clear CMOS jumper***

Use this jumper to clear the contents of the CMOS memory. You may need to clear the CMOS memory if the settings in the BIOS Setup Utility are incorrect and are preventing your mainboard from operating. To clear the CMOS memory, disconnect all the power cables from the mainboard and then move the jumper cap into the Clear CMOS memory setting for a few seconds. CMOS is cleared.

Return the jumper cap to the Normal operation setting. Reconnect the power cables and start the system. When the POST starts, press the delete key to start the BIOS Setup Utility and reload BIOS optimal settings. Refer to Chapter 3 for information on BIOS.

Function	Jumper Setting
Normal operation	Short pins 1-2
Clear CMOS	Short pins 2-3



### ***JP2: USB/keyboard wake up jumper***

Use this jumper to enable a signal to the USB ports (located on the I/O port panel) or to enable keyboard activity to wake up the system from power saving mode.

Function	Jumper Setting
Enable	Short pins 1-2
Disable	Short pins 2-3



### ***JP3: 2/4 M-bit set ROM memory size jumper***

This jumper is used to select the memory size for the onboard ROM. DO NOT make any adjustments to this jumper!

### ***JP4: 5/3.3 volt set ROM voltage jumper***

This jumper is used to select the voltage for the onboard ROM. DO NOT make any adjustments to this jumper!

**Important!** Do not make any changes to JP3 or JP4. These jumpers are set at the factory.

### **JP5: BIOS flash protect jumper**

Use this jumper to enable or disable the BIOS flash protection on the mainboard. You should disable this jumper when you want to flash the BIOS.

Function	Jumper Setting
Disable	Short pins 1-2
Enable	Short pins 2-3



### **JP6: CPU frequency select jumper**

This jumper enables you to force the CPU to clock at a higher frequency than it is rated. Short pins 2 and 3 to force the CPU to run at a 100 MHz FSB instead of a 66 MHz FSB. We recommend that you leave the jumper on the normal operation setting.

Function	Jumper Setting
Auto	Short pins 1-2
Force 66 MHz FSB to run at 100 MHz FSB.	Short pins 2-3



### **JP7: CPU frequency select jumper**

This jumper enables you to force the CPU to clock at a higher frequency than it is rated. Short pins 2 and 3 to force the CPU to run at a 133 MHz FSB instead of a 100 MHz FSB. We recommend that you leave the jumper on the normal operation setting.

Function	Jumper Setting
Auto	Short pins 1-2
Force 100 MHz FSB to run at 133 MHz FSB	Short pins 2-3



---

**Note:** The CPU speed is determined by the CPU Host/PCI Clock speed multiplied by the CPU Clock Ratio. Refer to the Frequency Control Option in Chapter 3 for more information.

Forcing the CPU to run at a higher clock speed than it was rated for is called overclocking and is not recommended.