

TABLE OF CONTENTS

1. INTRODUCTION

1.1. PREFACE 1-1
1.2. KEY FEATURES 1-1
1.3. PERFORMANCE LIST 1-2
1.4. BLOCK DIAGRAM 1-3
1.5. INTRODUCE THE INTEL® Celeron™ Socket 370 Processor 1-4
1.6. INTRODUCE AMR 1-4

2. SPECIFICATION

2.1. HARDWARE 2-1
2.2. SOFTWARE 2-2
2.3. ENVIRONMENT 2-2

3. HARDWARE INSTALLATION

3.1. UNPACKING 3-1
3.2. MAIN BOARD LAYOUT 3-2
3.3. QUICK REFERENCE FOR JUMPERS & CONNECTORS 3-3
3.4. DRAM INSTALLATION 3-8
3.5. CPU SPEED SETUP 3-8
3.6. CMOS RTC & ISA CFG CMOS SRAM 3-9
3.7. SPEAKER CONNECTOR INSTALLATION 3-9
3.8. HARDWARE RESET SWITCH CONNECTOR INSTALLATION 3-10
3.9. POWER LED CONNECTOR INSTALLATION 3-10
3.10. IDE & ATAPI DEVICE INSTALLATION 3-10

- 3.11. PERIPHERAL DEVICE INSTALLATION..... 3-10
- 3.12. KEYBOARD & PS/2 MOUSE INSTALLATION..... 3-10
- 4. BIOS CONFIGURATION**
- 4.1. ENTERING SETUP..... 4-1
- 4.2. CONTROL KEYS 4-1
- 4.3. GETTING HELP 4-2
 - 4.3.1. Main Menu 4-2
 - 4.3.2. Status Page Setup Menu / Option Page Setup Menu..... 4-2
- 4.4. THE MAIN MENU..... 4-2
- 4.5. STANDARD CMOS FEATURES MENU 4-5
- 4.6. ADVANCED BIOS FEATURES 4-9
- 4.7. ADVANCED CHIPSET FEATURES 4-13
- 4.8. INTEGRATED PERIPHERALS..... 4-16
- 4.9. POWER MANAGEMENT SETUP 4-24
- 4.10. PNP/PCI CONFIGURATIONS..... 4-29
- 4.11. PC HEALTH STATUS..... 4-31
- 4.12. FREQUENCY/VOLTAGE CONTROL..... 4-33
- 4.13. LOAD FAIL-SAFE DEFAULTS 4-35
- 4.14. LOAD OPTIMIZED DEFAULTS..... 4-36
- 4.15. SET SUPERVISOR/USER PASSWORD..... 4-37
- 4.16. SAVE & EXIT SETUP 4-38
- 4.17. EXIT WITHOUT SAVING 4-39
- APPENDIX A :**
- 810 INF update utility can't find ICHxIDE.cat file automatically. A-1

1. INTRODUCTION

1.1. PREFACE

Welcome to use the **6WMM7/6WMM7-1** motherboard. It is a Celeron™ Socket 370 Processor based PC / AT compatible system with PCI / ISA Bus, and has been designed to be the fastest PC / AT system. There are some new features allow you to operate the system with just the performance you want.

This manual also explains how to install the motherboard for operation, and how to set up your CMOS CONFIGURATION with BIOS SETUP program.

1.2. KEY FEATURES

- ❑ Intel Celeron™ Socket 370 Processor based PC / AT compatible main board.
- ❑ Socket 370 Pins ZIF white socket on board.
- ❑ Built-in AC 97-Link software audio and YAMAHA 744 Hardware audio (Optional).
- ❑ Supports Celeron™ Socket 370 processor running at 200-533 MHz.
- ❑ INTEL FW82810 chipset, Supports SDRAM / Ultra DMA66(optional) /33 IDE / Keyboard and PS/2 Mouse Power On / ACPI features.
- ❑ Supports 2xDIMMs using 3.3V SDRAM DIMM module.
- ❑ Supports 4MB SDRAM Display cache.(Optional)
- ❑ Supports external Modem Ring-On on COMA & COMB and internal Modem Ring-On.
- ❑ Supports PC100 SDRAM 16MB~512MB memory on board.
- ❑ Supports Wake-up on LAN.
- ❑ Supports AMR Function.
- ❑ Supports feature connector for TV-Out or DFP (Digital Flat Panel).
- ❑ 3xPCI Bus slots, 1xISA Bus slots(Optional).
- ❑ Supports 2 channels Ultra DMA66(optional)/33 IDE ports for 4 IDE Devices.
- ❑ Supports 1x Line in, 1x Line Out, 1x Mic in, 1x CD Line in,1x GAME Port 1 x TEL, 1x SPDIF OUT(Optional).
- ❑ Supports 2xCOM (16550), 1xLPT (EPP / ECP/ SPP), 1x1.44MB Floppy port.
- ❑ Supports Wake-up on LAN.
- ❑ Supports Dual BIOS Function.
- ❑ Licensed AWARD BIOS, 4M bits FLASH RAM.

- 24.4 cm x 24.2 cm Micro ATX SIZE form factor, 4 layers PCB.

1.3. PERFORMANCE LIST

The following performance data list is the testing results of some popular benchmark testing programs.

These data are just referred by users, and there is no responsibility for different testing data values gotten by users. (The different Hardware & Software configuration will result in different benchmark testing results.)


- CPU Intel® Celeron™ 466MHz Socket 370 processor
- DRAM (128x 2) MB SDRAM (WINBOND 852WB W986408BH-8H)
- CACHE SIZE 128 KB included in CPU
- DISPLAY Onboard Intel Corporation 810 Graphics Controller Hub) (4MB SDRAM)
- STORAGE Onboard IDE (IBM DTTA-371010)
- O.S. Windows NT™4.0 SPK4
- DRIVER Display Driver at 1024 x 768 x 64k colors x 75Hz.

Intel Bus Master IDE Driver 2.05.1 Alpha Release.

Processor	Intel® Celeron™ (Socket 370) 466MHz (66x7)
Winbench99	
CPU mark32	834
FPU Winmark	2500
Business Disk	4750
Hi-End Disk	10500
Business Graphics	163
Hi-End Graphics	323
Winstone99	
Business	29

Hi-End	28.5
--------	------

1.4. BLOCK DIAGRAM

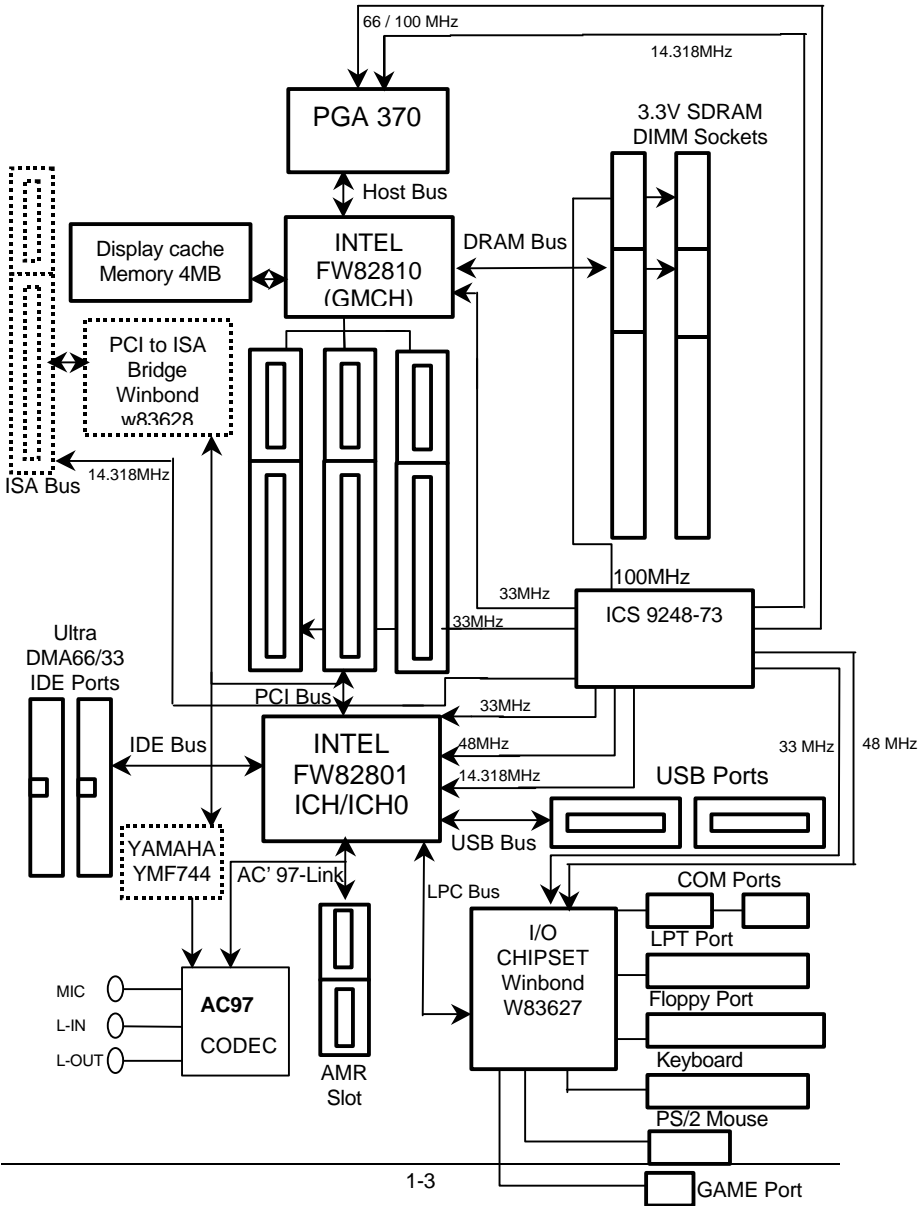

1.5. INTRODUCE THE INTEL® Celeron™ Socket 370 Processor



Figure 1: INTEL® Celeron™ Socket370 Processor

1.6 INTRODUCE AMR

The Audio Modem Riser (AMR) is a new port that supports both audio and modem. The main purpose of the AMR port is to provide lower cost and higher levels of integration at all levels of the PC platform.

The backbone of the AMR interface is on AC' 97 compliant AC-Link with support for codes. Motherboard support for an AMR interface are not only capable of achieving the lowest possible cost for basic PC audio and modem, but have also introduced increased motherboard flexibility enabling robust, cost effective scalability.

The AMR is done through software and controlled by the motherboard's I/O Controller Hub (ICH). There are two types of AMR, one defined as primary and another defined as secondary. If the motherboard with onboard sound YAMAHA 744, the AMR must be used primary.

2. SPECIFICATION

2.1. HARDWARE

- CPU
 - Celeron™ Socket 370 processor 200– 533 MHz.
 - 66/100MHz Socket 370 on board.
- PROTECTION
 - Speaker Alarm when detect "CPU FAN Failure" or "CPU Overheat".
 - Automatically slow down CPU speed when "CPU Overheat".
 - H/W monitor power status ($\pm 5V$, $\pm 12V$, VGTL, 5VSB, CPU voltage & CMOS battery voltage).(Optional)
- SPEED
 - 66/100 MHz system speed.
 - 33 MHz PCI-Bus speed.
 - 8 MHz AT bus speed.
- DRAM MEMORY
 - 2 banks 168 pins DIMM module sockets on board.
 - Use 16 / 32 / 64 / 128 / 256MB DIMM module DRAM.
 - Supports PC-100 SDRAM 16MB~512MB.
- CACHE MEMORY
 - 32 KB 1st cache memory included in CPU.
 - 128KB L2 cache memory included in CPU.
 - Supports DIB speed mode for L2 Cache.
- I/O BUS SLOTS
 - 3 33MHz Master / Slave PCI-BUS.
 - 1 8MHz 16 bits ISA BUS (Optional).
- IDE PORTS
 - 2 Ultra DMA66/33 Bus Master IDE channels on board.(Using IRQ14,15)
 - Supports Mode 3,4 IDE & ATAPI CD – ROM.

- I/O PORTS
 - Supports 2 16550 COM ports.
 - Supports 1 EPP/ECP LPT port.
 - Supports 1 1.44/2.88 MB Floppy port.
 - Supports 2 USB ports.
 - Supports PS/2 Mouse & Keyboard.
- Audio Ports
 - 1x Line in
 - 1x Line out
 - 1x Mic in
 - 1x Game Port
 - 1x CD Line in
 - 1x TEL (Optional)
 - 1x SPDIF OUT (Optional)
- GREEN FUNCTION
 - Suspend mode support.
 - Green switch & ACPI LED support.
 - IDE & Display power down support.
 - Monitors all IRQ / DMA / Display / I/O events.
- BIOS
 - Support Dual BIOS (Optional).
 - Supports Plug & Play, DMI Function.
- DIMENSION
 - Micro ATX Form Factor, 4 layers PCB.
- Display Cache
 - 4MB SDRAM (Optional)

2.2. SOFTWARE

- DRIVER
 - IUCD (Bus Master + Sound Driver + LDCM + Utility)
 - INTEL 82810 Driver.
- BIOS
 - Licensed AWARD BIOS.
 - AT CMOS Setup, BIOS / Chipset Setup, Green Setup, Hard Disk Utility included.
- O.S.
 - Operation with MS-DOS®, Windows®95, Windows®98, WINDOWS™ NT, OS/2, NOVELL and SCO UNIX.

2.3. ENVIRONMENT

- Ambient Temp.
 - 0°C to +50°C (Operating).
- Relative Hum.
 - 0 to +85% (Operating).
- Altitude
 - 0 to 10,000 feet (Operating).
- Vibration
 - 0 to 1,000 Hz.

- Electricity – 4.75 V to 5.25 V. (Max. 20A current at 5V.)

3. HARDWARE INSTALLATION

3.1. UNPACKING

The main board package should contain the following:

- The **6WMM7 / 6WMM7-1** main board.
- **USER'S MANUAL** for main board.
- Cable set for IDE, Floppy devices, [COMB Port Cable (Optional)].
- CD for main board Utility. [IUCD (Bus Master + Sound Driver + LDCM + Utility), INTEL 82810 Driver.]

The main board contains sensitive electric components, which can be easily damaged by static electricity, so the main board should be left in its original packing until it is installed.


Unpacking and installation should be done on a grounded anti-static mat. The operator should be wearing an anti static wristband, grounded at the same point as the anti-static mat.

Inspect the main board carton for obvious damage. Shipping and handling may cause damage to your board. Be sure there are no shipping and handling damages on the board before proceeding.

After opening the main board carton, extract the system board and place it only on a grounded anti-static surface component side up. Again inspect the board for damage. Press down on all of the socket IC's to make sure that they are properly seated. Do this only on with the board placed on a firm flat surface.


⚠ DO NOT APPLY POWER TO THE BOARD IF IT HAS BEEN DAMAGED.

3.2. MAIN BOARD LAYOUT 6WMM7

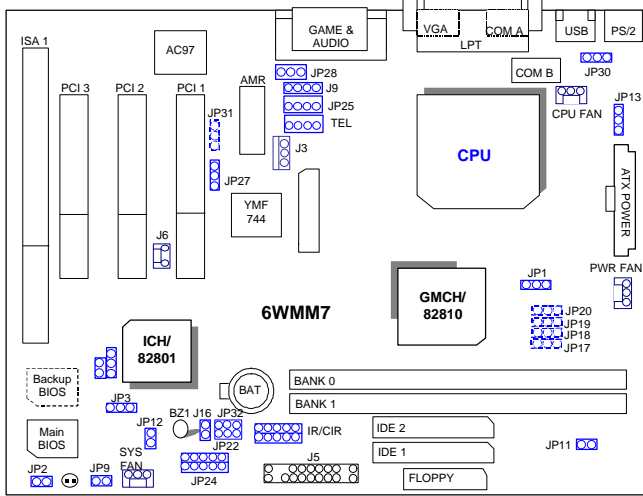

<Figure 3.1>

6WMM7-1

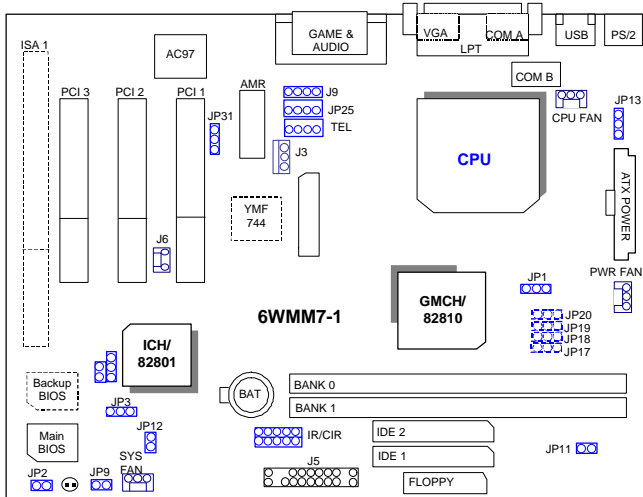

<Figure 3.2>

3.3. QUICK REFERENCE FOR JUMPERS & CONNECTORS

◆ I/O Ports Connector	
USB	USB port.
IDE1	For Primary IDE port.
IDE2	For Secondary IDE port.
PS/2	For PS/2 Mouse & Keyboard port.
FLOPPY	For Floppy port.
COMB	For Serial port2 (COM B){Support Modem Ring On}.
COMA	For Serial port1 (COM A){Support Modem Ring On}.
LPT	For LPT port.
VGA	For VGA Port.
ATX Power	For ATX Power Connector.
GAME & Audio	For GAME & MIC LINE-IN, LINE-OUT, TEL Port, AUX_IN, CD_IN, SPDIF OUT.

◆ Socket 370
For Celeron™ Socket 370 Processor installed

◆ IR : INFRARED Connector (IR / CIR) -- Function Option	
Pin No.	Function
1	VCC
2	NC
3	IRRX
4	GND
5	IRTX
6	NC
7	CIRRX
8	VCC
9	NC
10	NC

◆ CPU FAN : CPU cooling FAN Power Connector	
Pin No.	Function
1	GND.
2	+12V
3	SENSE

◆ PWR FAN: Power FAN Connector	
Pin No.	Function
1	GND.
2	+12V
3	SENSE

◆ SYS FAN: System FAN Connector	
Pin No.	Function
1	GND.
2	+12V
3	SENSE

◆ J16: Buzzer Enable (Optional)	
Pin No.	Function
Open	Internal Buzzer Disable
Short	Internal Buzzer Enable

◆ J6 RING PWR ON : Internal Modem Card Ring PWR On	
Pin No.	Function
1	Signal
2	GND

◆ JP13 : Keyboard Power On Selection (Optional)	
Pin No.	Function
1-2 short	Enabled Keyboard power on.
2-3 short	Disabled Keyboard power on(Default).

◆ JP3 : CLEAR CMOS	
Pin No.	Function
1-2 short	Clear CMOS
2-3 short	Normal operation (Default).

◆ J9: CD Audio Line in	
Pin No.	Function
1	Left
2	GND
3	GND
4	Right

◆ JP25:AUX_IN	
Pin No.	Function
1	AUX_L
2	GND
3	GND
4	AUX_R

◆ J3:Wake on LAN	
Pin No.	Function
1	+5V SB
2	GND
3	Signal

◆ TEL : The connector for Modem with internal voice connector.	
Pin No.	Function
1	Phone-in
2,3	GND
4	Mono-out

◆ JP11:STR Enable	
Pin No.	Function
Close	STR Enable
Open	STR Disable

◆ JP12: Case Open	
Pin No.	Function
1	Signal
2	GND

◆ JP26 : CPU FREQ. Safe mode	
Pin No.	Function
1-2 short	Normal
2-3 short	Safe Mode
1-2-3open	Recovery

◆ JP2: TABLE LOCK	
Pin No.	Function
Open	Table LOCK (Default)
Short	Table Unlock.

◆ JP4: Timeout Reboot	
Pin No.	Function
Open	Timeout Reboot.
Short	No Reboot.

◆ JP27: Onboard H/W Audio (Optional)	
Pin No.	Function
1-2 short	Disabled H/W Audio.
2-3 short	Enabled H/W Audio.(Default)


◆ JP32/ JP22: USB Port Selection (Optional)	
Pin No.	Function
1-2 short	Front Panel USB Port Enabled.
2-3 short	Back Front Panel USB Port Enabled.

◆ JP24: Front Panel USB Port (Optional)	
Pin No.	Function
1,4,5,10	NC
2	+5V
3,7,9	GND
6	USB P0+
8	USB P0-

◆ JP28: SPDIF (Optional)	
Pin No.	Function
1	VCC
2	SPD OUT
3	GND

◆ JP30: USB Keyboard wake-up (Optional)	
Pin No.	Function
1-2	Disable USB Keyboard wake-up.
2-3	Enable USB Keyboard wake-up.

J5 : For 2X11 PINs Jumper

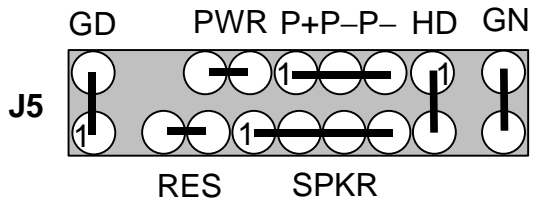


Soft PWR: Soft Power Connector



Open: Normal Operation
Short: Power On/Off

RES: Reset Switch



Open: Normal Operation
Short: For Hardware Reset System

P+P- P- : Power LED



PIN 1 : LED anode (+)
PIN 2 : LED cathode (-)
PIN 3 : LED cathode (-)

SPKR: Speaker Connector



PIN 1 : VCC (+)
PIN 2 : NC
PIN 3 : NC
PIN 4 : Data (-)

HD: IDE Hard Disk Active LED



PIN 1: LED anode (+)
PIN 2: LED cathode (-)

GN: Green Function Switch



Open : Normal operation
Short : Entering Green Mode

GD: Green LED



PIN 1 : LED anode (+)
PIN 2 : LED cathode (-)

3.4. DRAM INSTALLATION

The main board can be installed with 16 / 32 / 64 / 128 / 256 MB 168 pins DIMM module DRAM, and the DRAM speed must 100 MHz for SDRAM when system bus speed is set to 66MHz or 100MHz, the DRAM memory system on main board consists of bank 0 and bank 1.




Since 168 pins DIMM module is 64 bits width, therefore 1 piece of DIMM module may match a 64 bits system. The total memory size is 16 MB ~ 512MB SDRAM . The DRAM installation position refer to Figure 3.1, and notice the Pin 1 of DIMM module must match with the Pin 1 of DIMM socket. Insert the DIMM module into the DIMM socket at Vertical angle. If there is a wrong direction of Pin 1, the SDRAM DIMM module could not be inserted into socket completely.

3.5. CPU SPEED SETUP

The system bus frequency can be switched between 66MHz and 100MHz by adjusting JP1. The CPU Frequency is control by BIOS.

JP1: Set System Bus Speed

● **JP1** (Select the system speed between 66MHz / 100MHz and Auto)

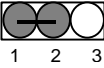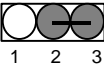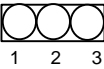1-2 Close 	Set system speed to Auto - auto detect system speed.
2-3 Close 	Set system speed to 66 MHz - system always run at 66MHz FSB (Front Side Bus).
1-2-3 Open 	Set system speed to 100 MHz - system always run at 100MHz FSB (Front Side Bus).

★ **Note:** Please set the CPU host frequency in accordance with your processor's specifications. We don't recommend you to set the system bus frequency over the CPU's specification because these specific bus frequencies are not the standard specifications for CPU, chipset and most of the peripherals. Whether your system can run under these specific bus frequencies properly will depend on your hardware configurations, including CPU, Chipsets, SDRAM, Cards..etc.

3.6. CMOS RTC & ISA CFG CMOS RAM

There're RTC & CMOS RAM on board; they have a power supply from external battery to keep the DATA inviolate & effective. The RTC is a REAL-TIME CLOCK device, which provides the DATE & TIME to system. The CMOS RAM is used for keeping the information of system configuration, so the system can automatically boot OS every time. Since the lifetime of internal battery is 5 years, the user can change a new Battery to replace old one after it cannot work.

- Danger of explosion if battery is incorrectly replaced.
- Replace only with the same or equivalent type recommended by the manufacturer.
- Dispose of used batteries according to the manufacturer's instructions.

3.7. SPEAKER CONNECTOR INSTALLATION

There is a speaker in AT system for sound purpose. The 4 - Pins connector **SPKR** is used to connect speaker.

3.8. HARDWARE RESET SWITCH CONNECTOR INSTALLATION

The RESET switch on panel provides users with HARDWARE RESET function. The system will do a cold start after the RESET switch is pushed and released by user. The RESET switch is a 2 PIN connector and should be installed to **RST** on main board.

3.9. POWER LED CONNECTOR INSTALLATION

System has power LED lamp on the panel of chassis. The power LED will light on off or flash to indicate which step on the system. The connector should be connected to **P+P-P-** of main board in a correct direction.

3.10. IDE & ATAPI DEVICE INSTALLATION

There are two-Enhanced PCI IDE ports (**IDE1, IDE2**) on board, which following ATAPI standard SPEC. Each IDE port can connected to two ATAPI devices (IDE Hard Disk, CD-ROM or Tape Driver), so total four ATAPI devices can exist in a system. The **HD** is the active LED port for ATAPI devices.

3.11. PERIPHERAL DEVICE INSTALLATION

After the I/O device installation and jumpers setup, the main board can be mounted into the chassis and fixed by screw. To complete the main board installation, the peripheral device could be installed now. The basic system needs a display interface card. If the PCI - Bus device is to be installed in the system, any one of three PCI - Bus slots can be used.

3.12. KEYBOARD & PS/2 MOUSE INSTALLATION

The main board supports PS/2 Mouse. The BIOS will auto detect whether the PS/2 Mouse is installed or not & assign IRQ12 for PS/2 Mouse port if it is installed. After installing the peripheral device, the user should check everything again, and ready power-on the system.